

**FBI XL-2T Model Alarm Systems (rev. 9.14.09)**

**To ARM the system and go AWAY**

1. Secure all doors and windows.
  - READY light should be lit
2. Enter your 4-digit code.
  - ARMED light should be lit
3. Immediately exit through a delay door.

**To ARM the system and STAY in building**

1. Secure all doors and windows.
  - READY light should be lit
2. Press the STAY button.
3. Enter your 4-digit code.
  - ARMED and STAY lights should be lit  
(perimeter zones are active and interior zones are now bypassed, allowing you to move around inside)

**To ARM the system in STAY / INSTANT mode.**

1. Secure all doors and windows.
  - READY light should be lit
2. Press the STAY and INSTANT buttons.
3. Enter your 4-digit USER code.
  - System is immediately ARMED with NO DELAY.
  - ARMED, STAY, and INSTANT lights should be lit  
(perimeter zones are active and interior zones are now bypassed, allowing you to move around inside)

**To DISARM the system**

1. Enter building through a delay door.
  - Control station will sound to remind you to disarm the system
2. Enter your 4-digit code.
  - ARMED light should go off

**To CHANGE a MASTER (User 01) code**

1. Press the CODE button.
2. Enter the current 4-digit MASTER code.
3. Enter 01.
4. Enter the new 4-digit MASTER code.

**To ADD / CHANGE / DELETE a USER code (max 12 users)**

1. Press the CODE button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (02-12) you wish to add, change, or delete.
4. Enter the new 4-digit USER code. (to delete an existing code, press \* for this step)

**To BYPASS a ZONE**

1. Press the BYPASS button.
2. Enter your 4-digit code.
3. Press the 2-digit zone number (01, 02, up to 16) you wish to bypass.
  - Red light for bypassed zone should blink.
4. Arm the system.

**PLEASE MAKE NOTE OF WHICH STATUS LIGHTS ARE ON BEFORE YOU CALL FOR SERVICE  
WE ARE HERE LOCALLY WHEN YOU NEED US**