

FBI XL-4800 Model Alarm Systems (rev. 9.14.09)

To ARM the system and go AWAY

1. Secure all doors and windows.
 - Display reads SYSTEM READY.
2. Enter your 4-digit code.
 - Display reads ON AWAY EXIT NOW.
 - ARMED light should be lit.
3. Immediately exit through a delay door.

To ARM the system and STAY in building

1. Secure all doors and windows.
 - Display reads SYSTEM READY
2. Press the STAY button.
3. Enter your 4-digit code.
 - Display reads ON STAY.
 - ARMED light should be lit.

(perimeter zones are active and interior zones are now bypassed, allowing you to move around inside)

To ARM the system in STAY / INSTANT mode.

1. Secure all doors and windows.
 - READY light should be lit
2. Press the STAY and INSTANT buttons.
3. Enter your 4-digit USER code.
 - System is immediately ARMED with NO DELAY.
 - Display reads ON STAY INSTANT .
 - ARMED light should be lit.

(perimeter zones are active and interior zones are now bypassed, allowing you to move around inside)

To DISARM the system

1. Enter building through a delay door.
 - Control station will sound to remind you to disarm the system.
2. Enter your 4-digit code.
 - ARMED light should go off.

To CHANGE a MASTER (User 01) code

1. Press the CODE button.
2. Enter the current 4-digit MASTER code.
3. Enter 01.
4. Enter 01 again for confirmation.
5. Enter the new 4-digit MASTER code.
6. Enter the new 4-digit MASTER code again for confirmation.
7. Enter 1 (designates master user)
8. Enter 1 again for confirmation.

To ADD / CHANGE a USER code (max 12 users)

1. Press the CODE button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (02-12) you wish to add or change.
4. Enter the desired 2-digit USER code (02-12) again for confirmation.
5. Enter the new 4-digit USER code.
6. Enter the new 4-digit USER code again for confirmation.
7. Enter 2 (designates normal user)
8. Enter 2 again for confirmation.

To DELETE a USER code

1. Press the CODE button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (02-12) you wish to delete.
4. Enter the desired 2-digit USER code (02-12) again for confirmation.
5. Press the # button.

To BYPASS a ZONE

1. Press the BYPASS button.
2. Enter your 4-digit code.
3. Press the 1-digit zone number (1, 2, up to 6) you wish to bypass.
 - Red light for bypassed zone should blink.
4. Arm the system.

**PLEASE MAKE NOTE OF WHICH STATUS LIGHTS ARE ON BEFORE YOU CALL FOR SERVICE
WE ARE HERE LOCALLY WHEN YOU NEED US**