

DSC Model Alarm Systems (rev. 1.5.11)

To ARM the system and go AWAY

1. Secure all doors and windows.
 - Green READY light or check mark should be on
2. Enter your 4-digit-code or press and hold AWAY button.
 - Red ARMED light should be on and beeping
3. Immediately exit through a delay door.



To ARM the system and STAY in building

1. Secure all doors and windows.
 - Green READY light or check mark should be on
2. Press and hold HOME button.
 - Red ARMED light should be on (no beeping)



To ARM the system in NIGHT/INSTANT mode.

1. Secure all doors and windows.
 - Green READY light or check mark should be on
2. Press the * button then the 9 button.
3. Enter your 4-digit USER code.
 - System is immediately ARMED with NO DELAY.

To DISARM the system

1. Enter building through a delay door.
 - Control station will beep to remind you to disarm the system
2. Enter your 4-digit code.
 - Red ARMED light should go off

To CHANGE a MASTER code

1. Press the * button then the 5 button.
2. Enter the current 4-digit MASTER code.
3. Enter 40.
4. Enter the new 4-digit MASTER code.
5. Press the # button to exit programming.

To CHANGE a USER code

1. Press the * button then the 5 button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (01, 02, etc.) you wish to change.
4. Enter the new 4-digit USER code.
5. Press the # button to exit programming.

To DELETE a USER code

1. Press the * button then the 5 button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (01, 02, etc.) you wish to delete.
4. Press the * button to delete that USER code.
5. Press the # button to exit programming.
[DO NOT delete the MASTER code]

To activate EMERGENCY alarm

1. Press emergency button corresponding to the emergency type for 2 seconds.

To SILENCE and view trouble condition

1. Press the * button then the 2 button.
 - Lights indicate the trouble type as follows:
 - #1 call for service
 - #2 loss of incoming power
 - #3 telephone line trouble
 - #4 failed to call Central Station
 - #5 zone not normal
 - #6 zone transmitter tamper not normal
 - #7 zone transmitter low battery
 - #8 time/date need reset

To turn the DOOR CHIME ON/OFF

1. Press and hold the CHIME button for 2 seconds.
2. Press the # button to return to ready state.



To BYPASS a ZONE

1. Press the * button then the 1 button.
2. Press the 2-digit zone number (01, 02, etc.) to bypass.
3. Press the # button to return to the ready state.
4. Arm the system in STAY or AWAY mode as desired.

To CHANGE the system TIME/DATE

1. Press the * button then the 6 button.
2. Enter the 4-digit MASTER code.
3. Press the 1 button.
4. Enter time and date in following format:
HH (24 hr) MM (minutes) MM (month) DD (day) YY (year)
5. Press the # button to exit programming

To clear MEMORY LIGHT

Contact us if you are unaware of the recent alarm activation causing the MEMORY light. To clear:

1. ARM the system by entering any valid 4-digit USER code.
2. DISARM the system by entering any valid 4-digit USER code.
 - MEMORY light should now be off.

PLEASE MAKE NOTE OF WHICH STATUS LIGHTS ARE ON BEFORE YOU CALL FOR SERVICE

WE ARE HERE LOCALLY WHEN YOU NEED US