


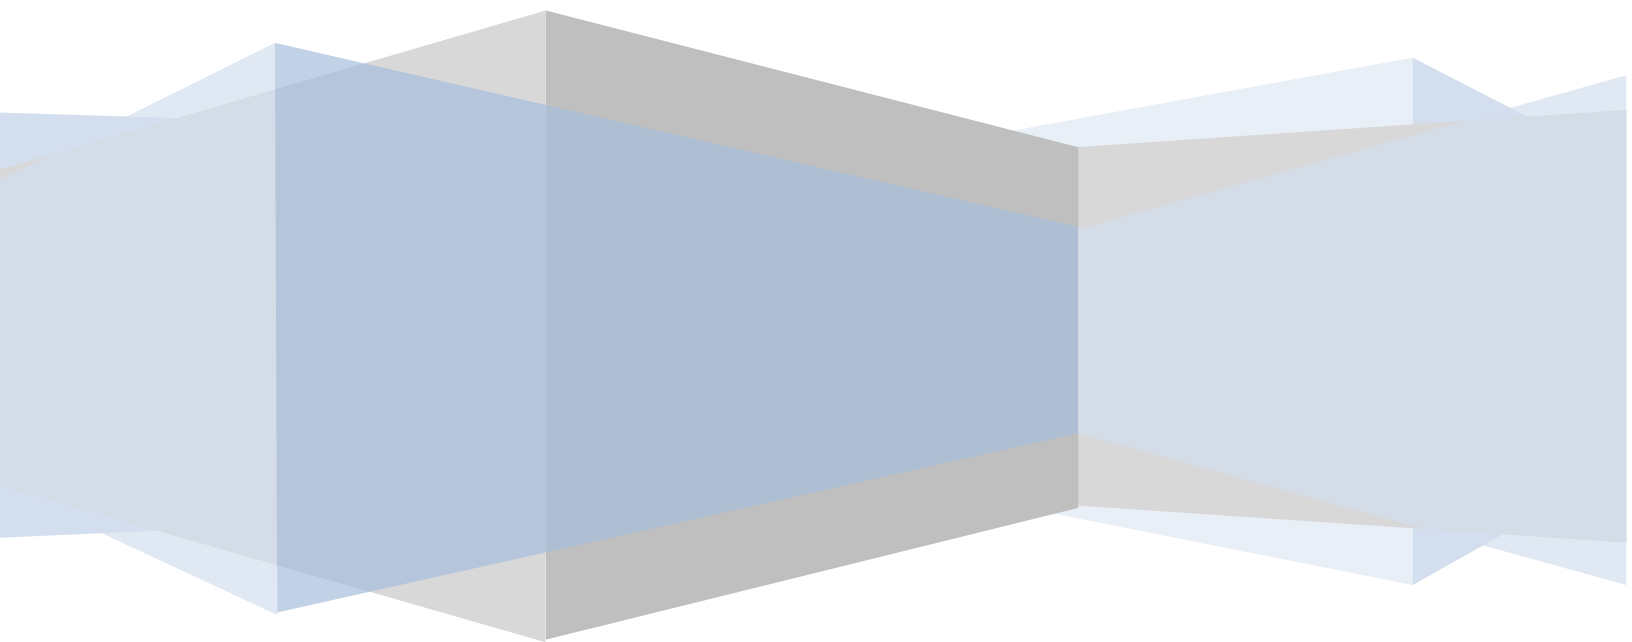

DSC Alarm Systems Customer User Guide

Getting Started with the Basics

Security Alarm Corporation



To ARM the system and go AWAY

1. Secure all doors and windows.
2. Green READY light or check mark should be on
3. Enter your 4-digit-code or press and hold AWAY button.
4. Red ARMED light should be on and beeping
5. Immediately exit through a delay door.



To ARM the system and STAY in building

1. Secure all doors and windows.
2. Green READY light or check mark should be on
3. Press and hold HOME button.
4. Red ARMED light should be on (no beeping)



To ARM the system in NIGHT/INSTANT mode.

1. Secure all doors and windows.
2. Green READY light or check mark should be on
3. Press the * button then the 9 button.
4. Enter your 4-digit USER code.
5. System is immediately ARMED with NO DELAY.

To DISARM the system

1. Enter building through a delay door.
2. Control station will beep to remind you to disarm the system.
3. Enter your 4-digit code.
4. Red ARMED light should go off.

To CHANGE a MASTER code

1. Press the * button then the 5 button.
2. Enter the current 4-digit MASTER code.
3. Enter 40.
4. Enter the new 4-digit MASTER code.
5. Press the # button to exit programming.

To CHANGE a USER code

1. Press the * button then the 5 button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (01, 02, etc.) you wish to change.
4. Enter the new 4-digit USER code.
5. Press the # button to exit programming.

To DELETE a USER code

1. Press the * button then the 5 button.
2. Enter the current 4-digit MASTER code.
3. Enter the desired 2-digit USER code (01, 02, etc.) you wish to delete.
4. Press the * button to delete that USER code.
5. Press the # button to exit programming.

[DO NOT delete the MASTER code]

To activate EMERGENCY alarm

1. Press emergency button corresponding to the emergency type for 2 seconds.

To turn the DOOR CHIME ON/OFF

1. Press and hold the CHIME button for 2 seconds.
2. Press the # button to return to ready state.



To BYPASS a ZONE

1. Press the * button then the 1 button.
2. Press the 2-digit zone number (01, 02, etc.) to bypass.
3. Press the # button to return to the ready state.
4. Arm the system in STAY or AWAY mode as desired.

To CHANGE the system TIME/DATE

1. Press the * button then the 6 button.
2. Enter the 4-digit MASTER code.
3. Press the 1 button.
4. Enter time and date in following format:
HH (24 hr) MM (minutes) MM (month) DD (day) YY (year)
5. Press the # button to exit programming

To clear MEMORY LIGHT

Contact us if you are unaware of the recent alarm activation causing the MEMORY:

1. ARM the system by entering any valid 4-digit USER code.
2. DISARM the system by entering any valid 4-digit USER code.
3. MEMORY light should now be off.