


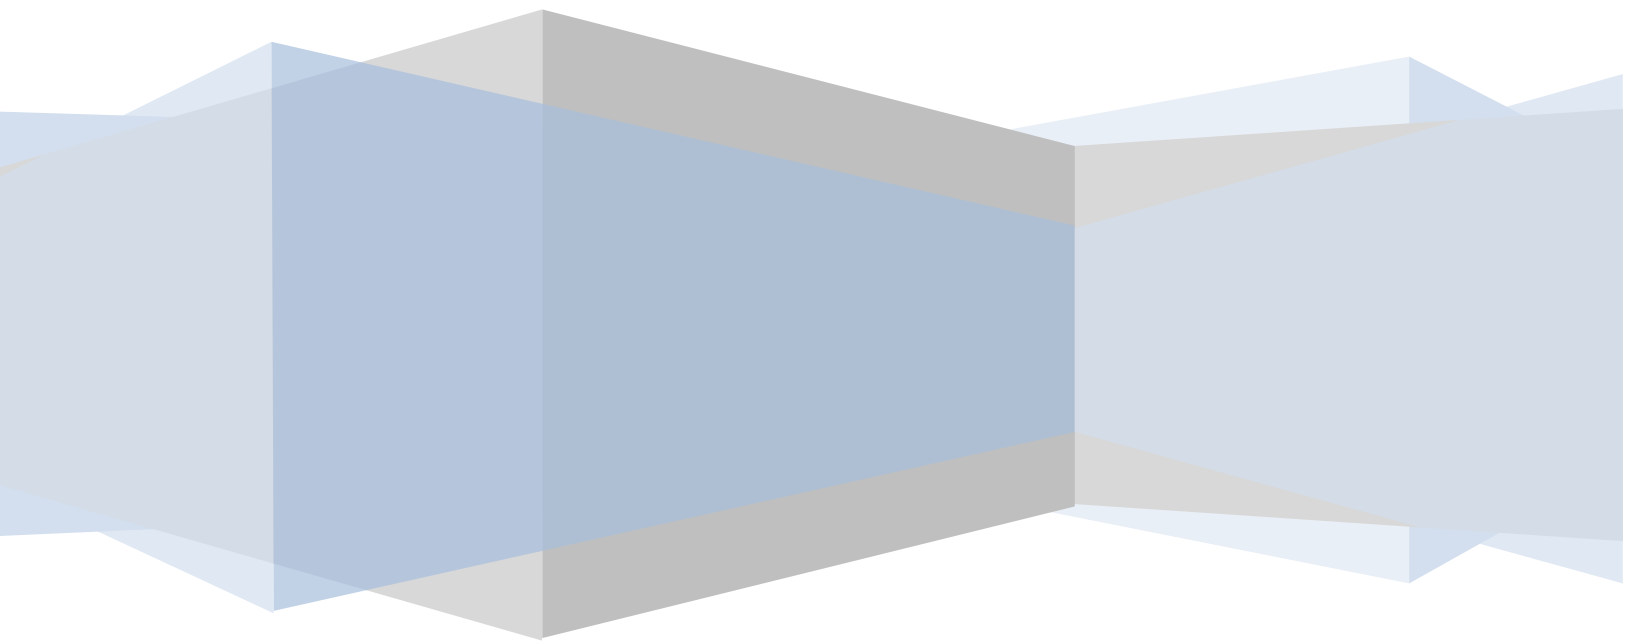

# Honeywell Vista 15P/20P Customer User Guide

Getting Started with the Basics

Security Alarm Corporation



## **To ARM the system and go AWAY**

1. Secure all doors and windows.
2. Enter your 4-digit USER code and press [2].
3. Red ARMED message will display.

## **To ARM the system and STAY in building**

1. Secure all doors and windows.
2. Enter your 4-digit USER code and press [3].
3. Red ARMED message will display.
4. Motion detectors will be bypassed.

## **To ARM the system in INSTANT mode.**

1. Secure all doors and windows.
2. Enter your 4-digit USER code and press [7].
3. Entry delay will be turned off and red ARMED be displayed.

## **To DISARM the system**

1. Enter building through a delay door.
  - Control station will beep to remind you to disarm the system.
2. Enter your 4-digit code.
  - Red ARMED light should go off.

## **To CHANGE a MASTER code**

1. Enter your 4-digit MASTER code.
2. Press [8] then 02.
  - User 02 is reserved for System Master.
3. Enter in new 4-digit MASTER code TWICE  
(ex. 1234 8 02 5678 5678)
4. The keypad beeps once to confirm that new user was added.

## **To CHANGE a USER code**

1. Enter your 4-digit MASTER code.
2. Press [8] + user number you wish to add.
  - Start with User 03 to 33
3. Enter in desired user's security code.  
(ex. 1234 8 03 1111)
4. The keypad beeps once to confirm that new user was added.

## **To DELETE a USER code**

1. Enter your 4-digit MASTER code
2. Press 8 + user number you wish to delete.
3. Press the pound [#] sign then [0]  
(ex. 1234 8 03 # 0)

**[DO NOT delete the MASTER code USER 02]**

## **To activate EMERGENCY alarm**

1. Press emergency button corresponding to the emergency type for 2 seconds.

### **To turn the DOOR CHIME ON/OFF**

1. Enter your 4-digit USER code.
2. Press 9.
3. Repeat to turn off.

### **To BYPASS a ZONE**

1. Enter your 4-digit USER code.
2. Press [6] + zone numbers.  
(ex. 1234 6 02 or 11 – MUST BE TWO DIGITS).
3. Keypad will display ZONE BYPASSED when armed.

### **To CHANGE the system TIME/DATE**

1. Enter your 4-digit MASTER code
2. Press [#] then [6] then [3]
3. Press [\*] when the time/date is displayed. A cursor will appear in the first digit of the hour (To move ahead, press [\*], backwards [#])
4. Enter the 2 Digit hours setting, 2 digit minute setting. Press [1] for PM or [2] for AM. Enter the last two digits of the current year. Enter the 2-digit month, Enter the 2-digit day.
5. To exit, press [\*] when the cursor is at the last digit or, or wait 30 seconds.

### **To clear MEMORY LIGHT**

Contact us if you are unaware of the recent alarm activation causing the MEMORY:

1. After disarming, enter USER code again.
2. Press OFF [1] key again.